## **Yealink SIP IP Phones Release Note of Version 71**

### 1. Introduction

Firmware Version:

T19P: 31.71.0.50 Upgrade to 31.71.193.5

T21P: 34.71.0.90 Upgrade to 34.71.193.5

Applicable Models: SIP- T19P/T21P

• Release Date: November 20, 2013

#### 2. New Features

There is no New Features added on the new commercial version.

# 3. Optimization

1. Optimized some factory default settings to meet the BroadSoft environment :

Configurations	Descriptions	Factory default value in 31.71.0.50 34.71.0.90	Factory default value in 31.71.193.5 34.71.193.5
bw.directory_enable	Enable or disable the BroadSoft	0	1
_	feature; 0-Disabled,1-Enabled;		
zero_touch.enable =	Enable or disable zero touch for the phone to perform provisioning during startup;  0-Disabled, 1-Enabled;	0	1
account.X.sip_server _type =	Configure the SIP server type for account x;  0-Default,2-BroadSoft;	0	2
bw.feature_key_syn c =	Enable or disable feature key synchronization; 0-Disabled,1-Enabled;	0	1
bw.calllog_and_dir =	Enable or disable the phone to access the BSFT call	0	1

	Т	1	1
	log/phonebook directly when		
	pressing the History/Directory		
	soft keys;		
	0-Disabled , 1-Enabled;		
bw_phonebook.grou	Enable or disable the group	0	1
p_enable =	directory to be displayed on the		
	IP phone;		
	0-Disabled , 1-Enabled;		
bw_phonebook.pers	Enable or disable the personal	0	1
onal_enable =	directory to be displayed on the		
	IP phone;		
	0-Disabled , 1-Enabled;		
bw_phonebook.call_	Enable or disable BroadSoft call	0	1
log_enable =	log feature;		
	0-Disabled , 1-Enabled;		
phone_setting.auto_	Enable or disable the phone to	0	1
blf_list_enable =	automatically configure the BLF		
	list keys;		
	0-Disabled , 1-Enabled;		
features.blf_and_cal	Enable or disable the phone to	0	1
lpark_idle_led_enabl	turn off the BLF key LED when		
e =	the monitored user is idle;		
	0-Disabled (LED ON);		
	1-Enabled (LED OFF);		
features.factory_pw	Enable or disable the phone to	0	1
d_enable =	prompt for the administrator		
	password when you long press		
	the OK key to perform factory		
	reset;		
	0-Disabled , 1-Enabled;		
features.group_liste	Enable or disable the phone to	null	0
n_in_talking_enable	enter into the group listening		
=	mode by pressing the speaker		
	phone key when it is in talking		
	using the handset;		
	0-Disabled , 1-Enabled;		

# 4. Bug Fixes

There is no Bugs fixed on the new commercial version.